



# INSTALLATION INSTRUCTIONS

**Product**  
**7160-1342**

**Revision**  
Rev.A

**Form**  
INST-883


**FAN ADAPTER**

**Printing Spec:PS-001**

This instruction sheet is for attaching a fan adapter 7160-1342 to a fan and mount with the NEC hole pattern like the Gamber-Johnson 7160-1261.

### Mounting the adapter

1. Attach the adapter to the fan with the (3) #8-32 x 3/4" phillips flat head machine screws and nylock nuts found in hardware bag 7120-0897. Note: Some fans might have a rubber washer that will fit between the fan and the adapter.
2. Attach the adapter to the mount by inserting the #8-32 pressed in studs through the mating holes in the mount. Attach in place with the (3) #8-32 nylock nuts found in hardware bag 7120-0897.

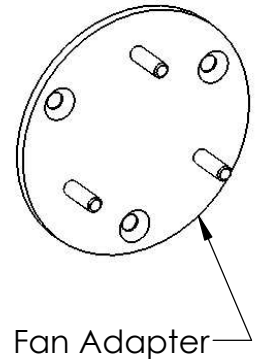

#8-32 nylock nuts

#8-32 x 3/4" flat head machine screws and nylock nuts

7160-1261

fan shown mounted on forklift overhead guard

Fan Adapter

#### Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2018 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868